
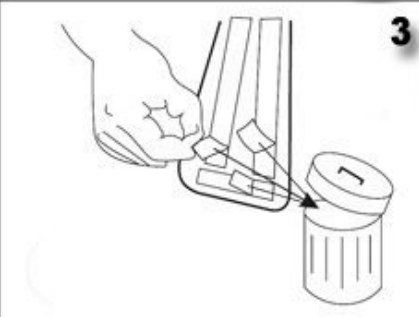
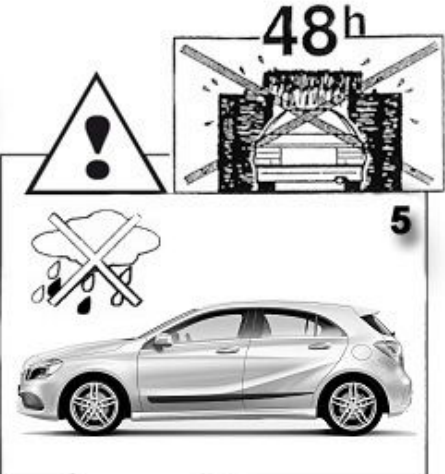
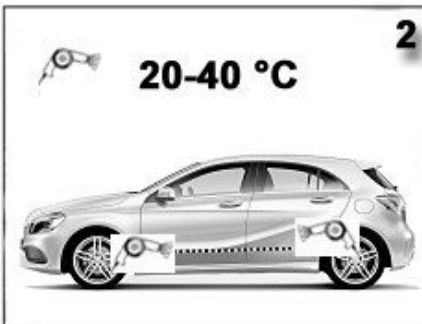


Mercedes Benz A-klasse 2013→

PU Side Mouldings

F-24

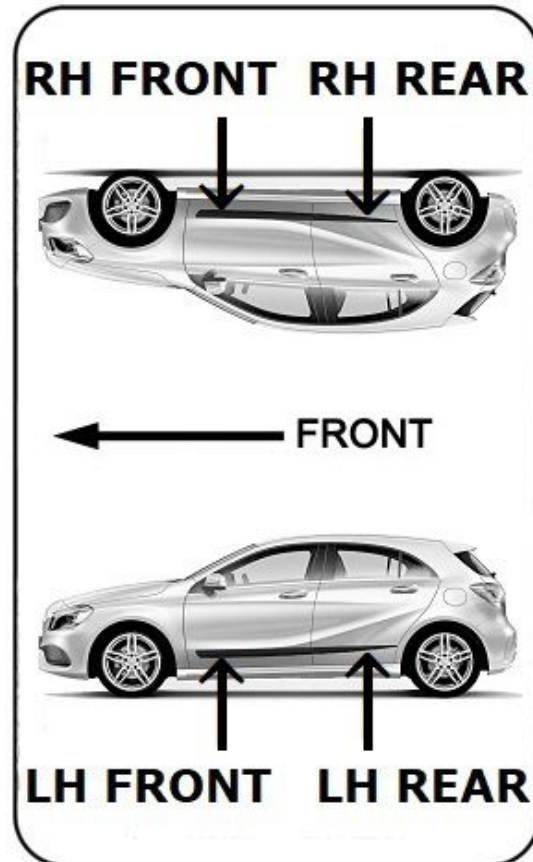

ledere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrücken jeden cm !!

