



# Volkswagen T5 / T6






PU side mouldings

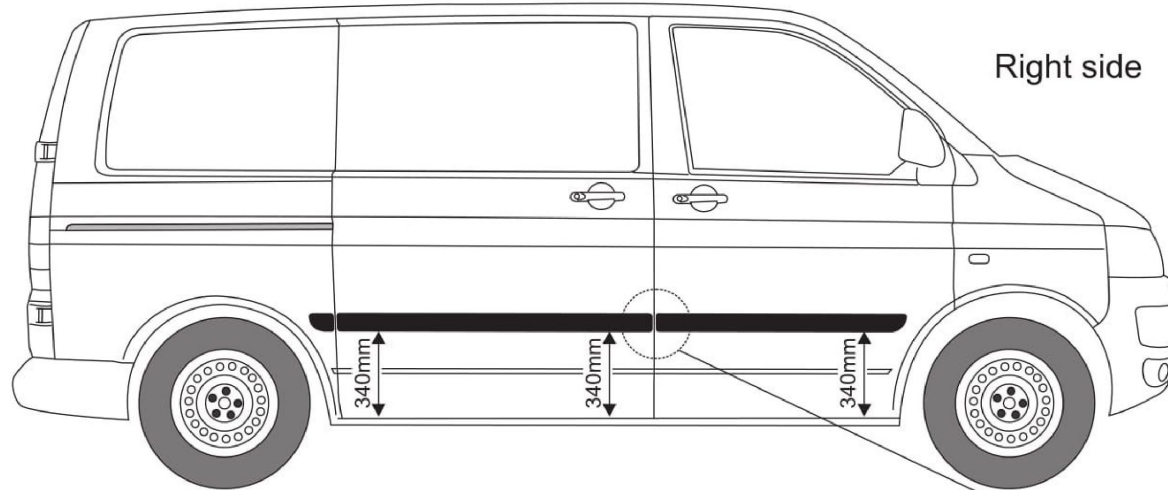

Right side

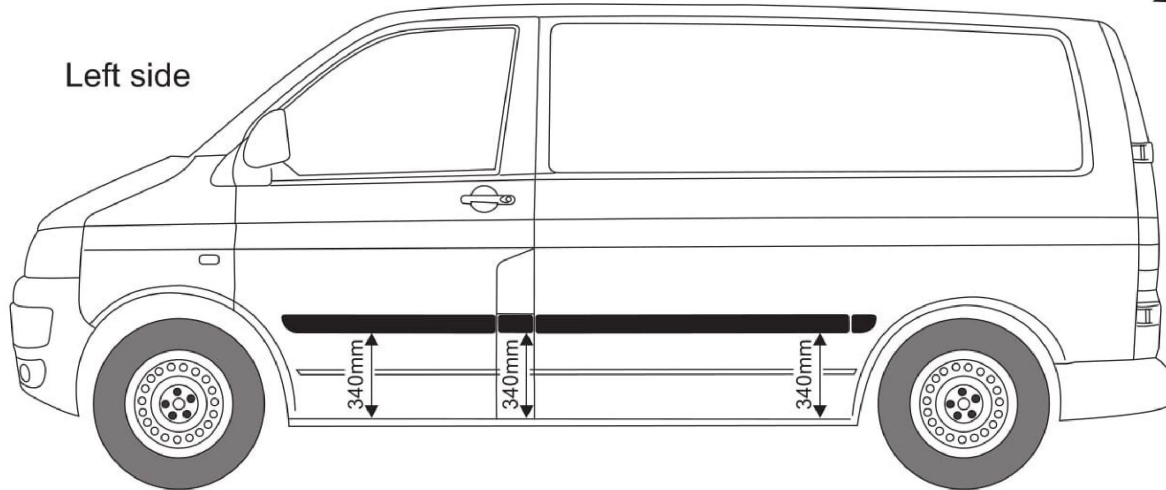

Left side

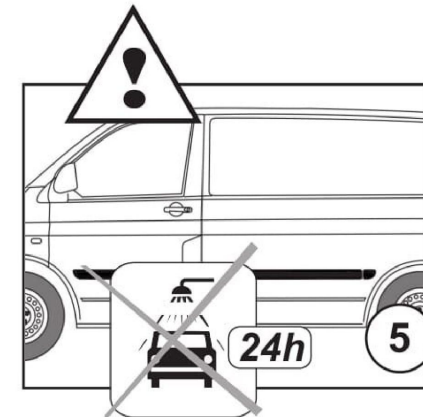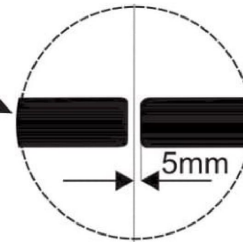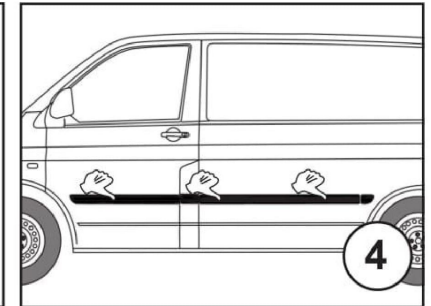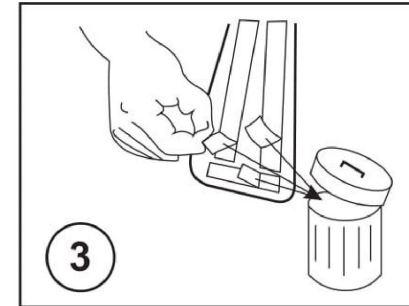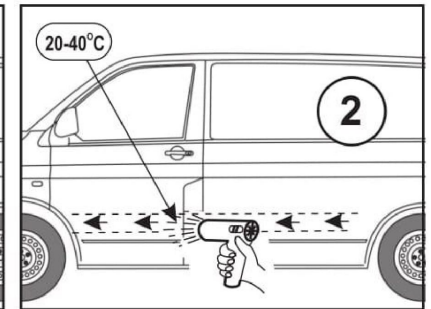

Iedere cm goed aandrukken !!  
Press very carefully every cm !!  
Sehr fest andrücken jeden cm !!