
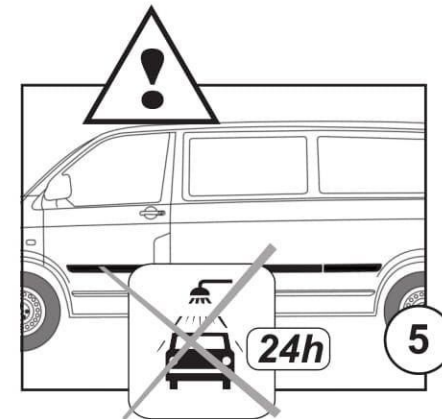
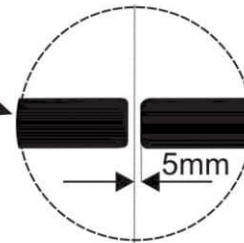
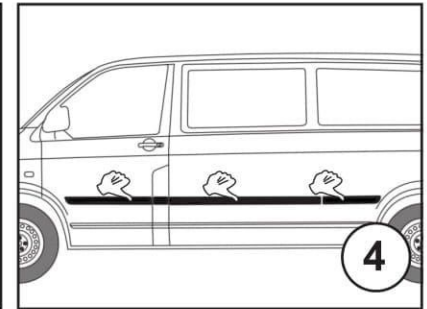
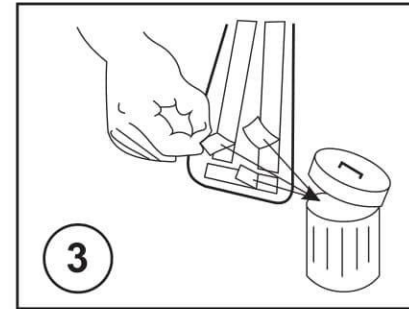
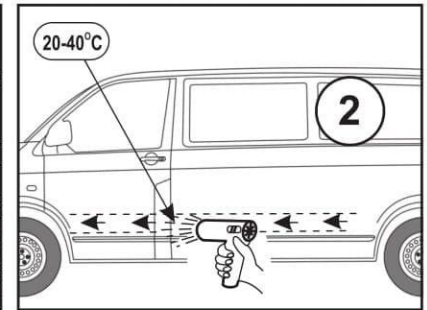
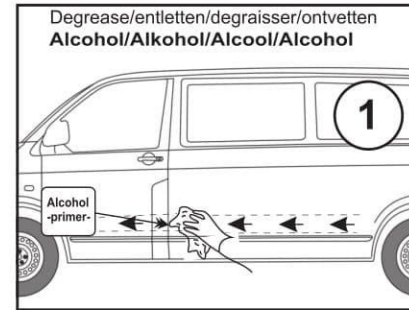
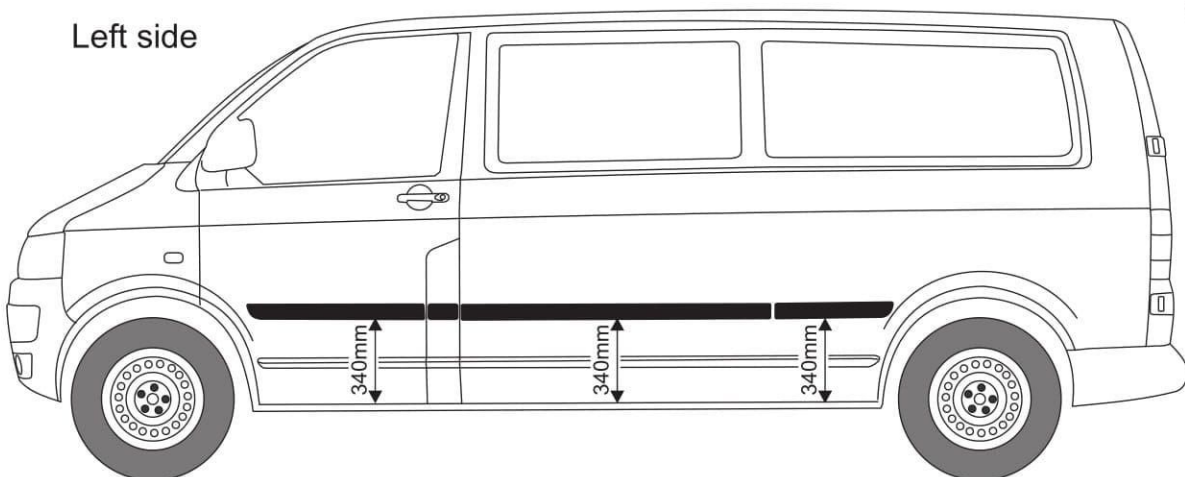


Volkswagen T6 (long)

PU side mouldings

F-38 AB LONG

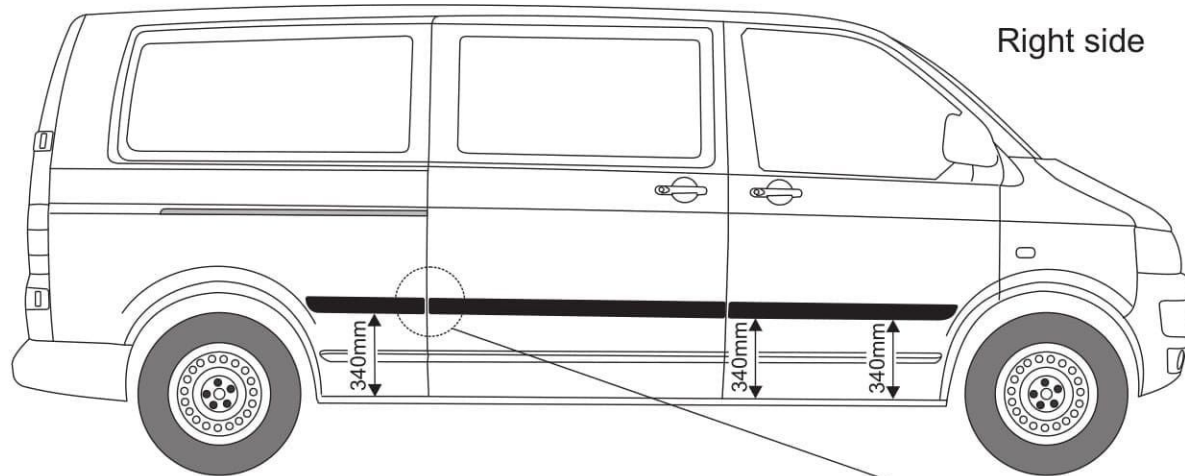

Iedere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrucken jeden cm !!