
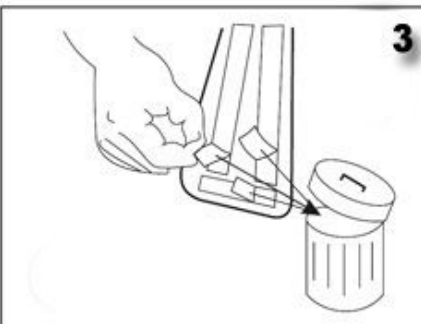
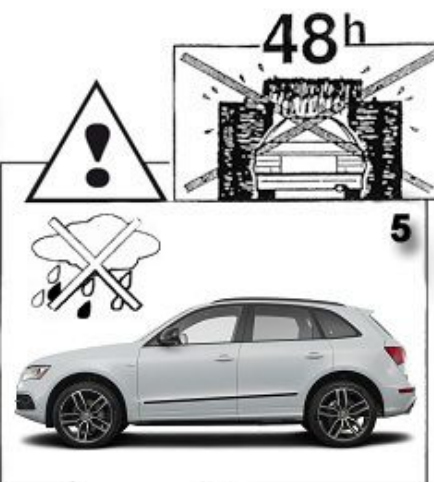


Audi Q5 2008-2017

PU Side Mouldings

F-11

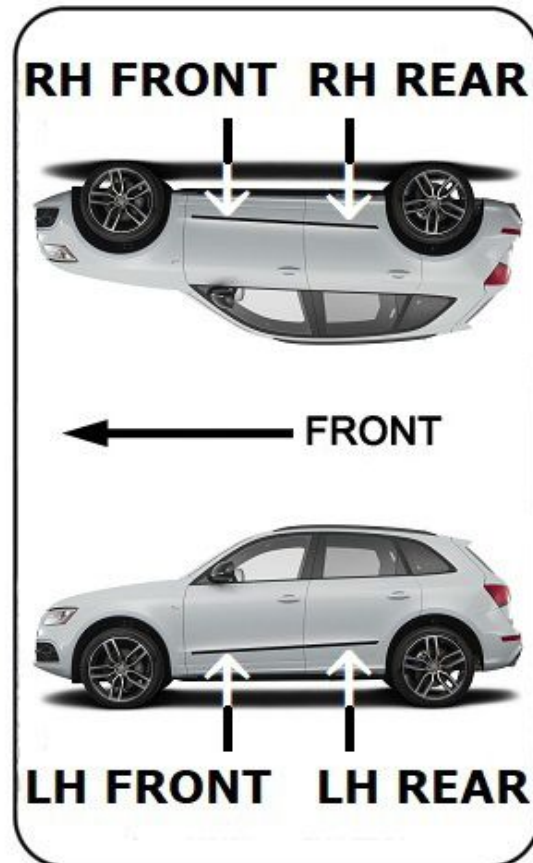

ledere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrücken jeden cm !!

