



Opel Corsa C 3D 2000-06

PU Side Mouldings


F-13

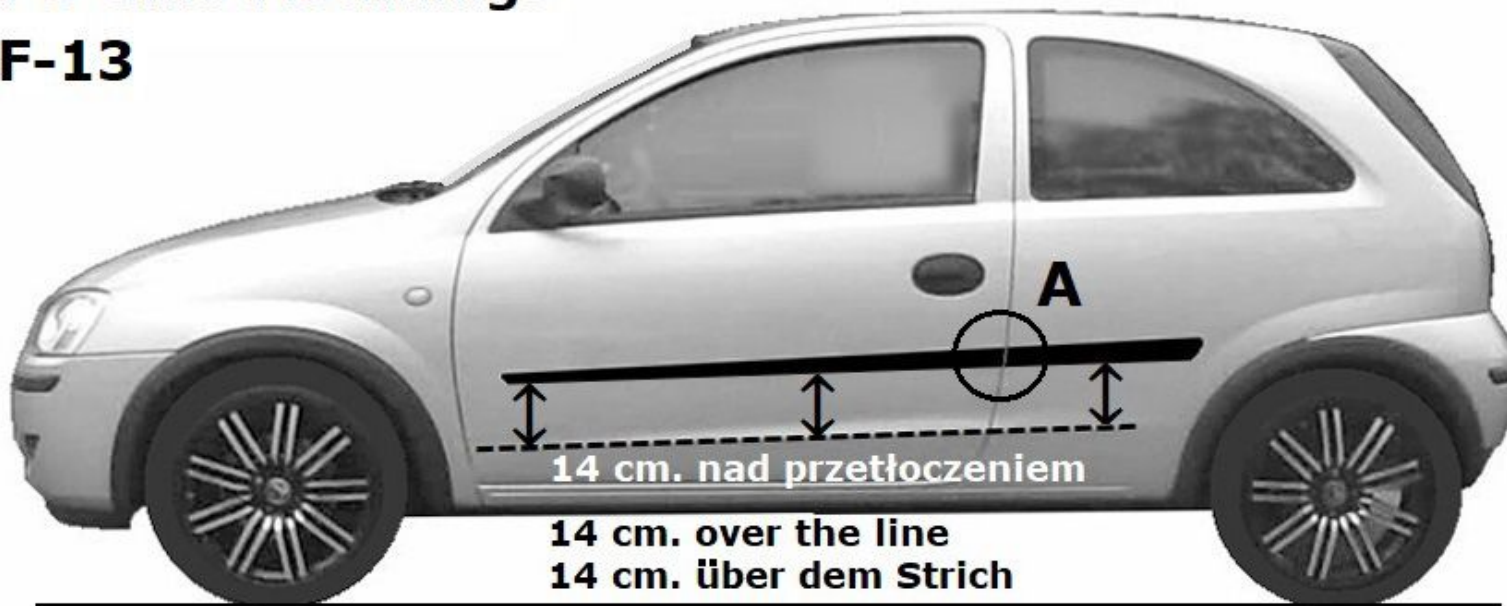




RH FRONT RH REAR

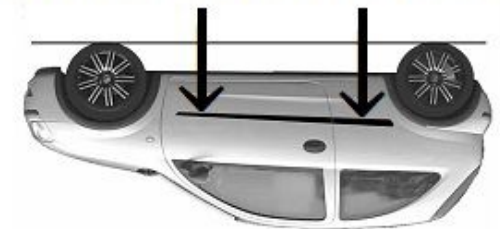

← FRONT

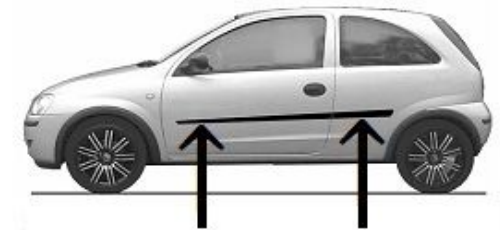

LH FRONT LH REAR

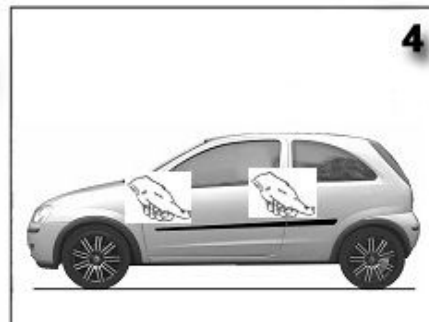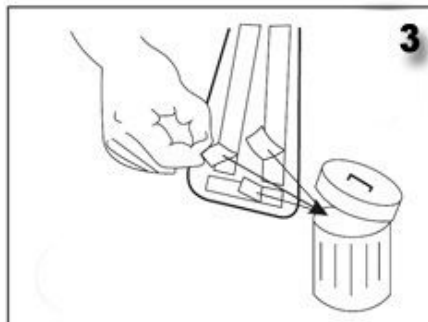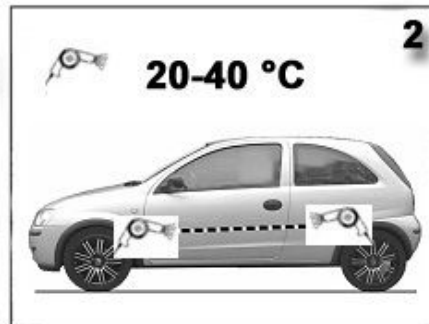

ledere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrücken jeden cm !!

