

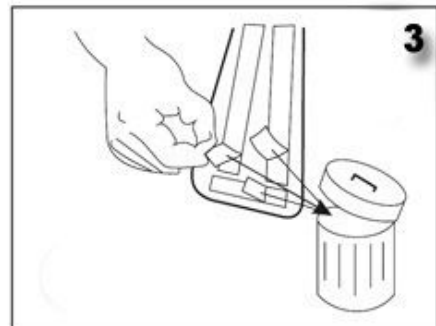
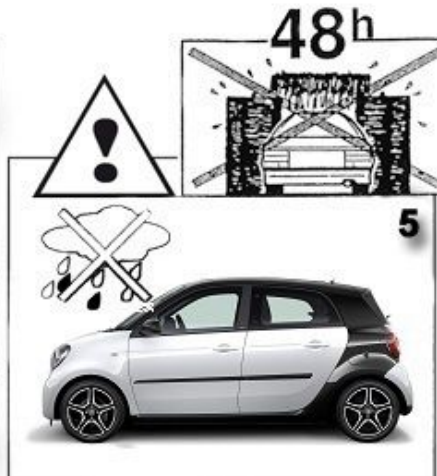
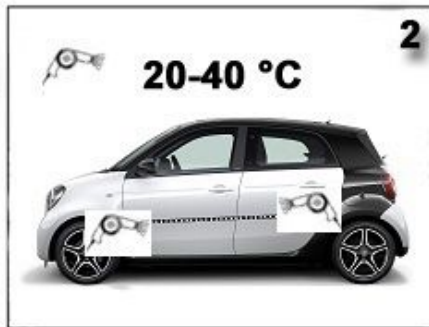


Smart ForFour 2014 → PU Side Mouldings F-17

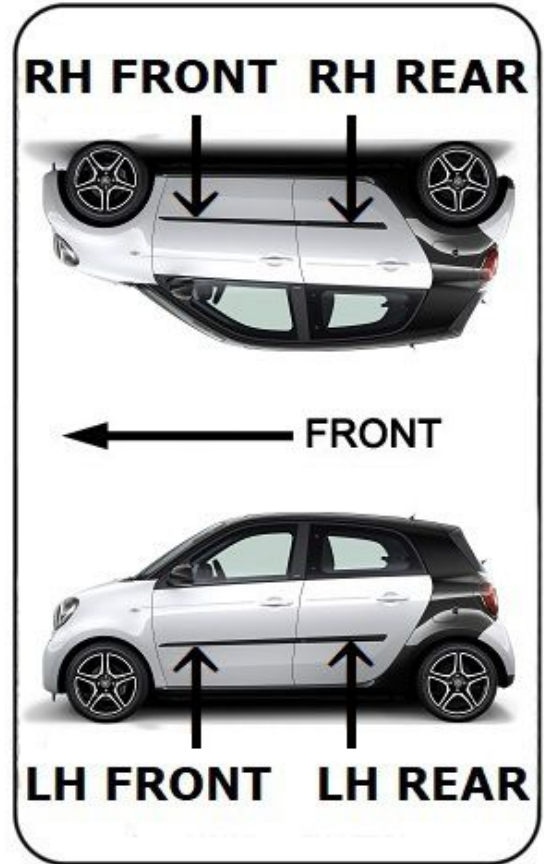

ledere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrücken jeden cm !!

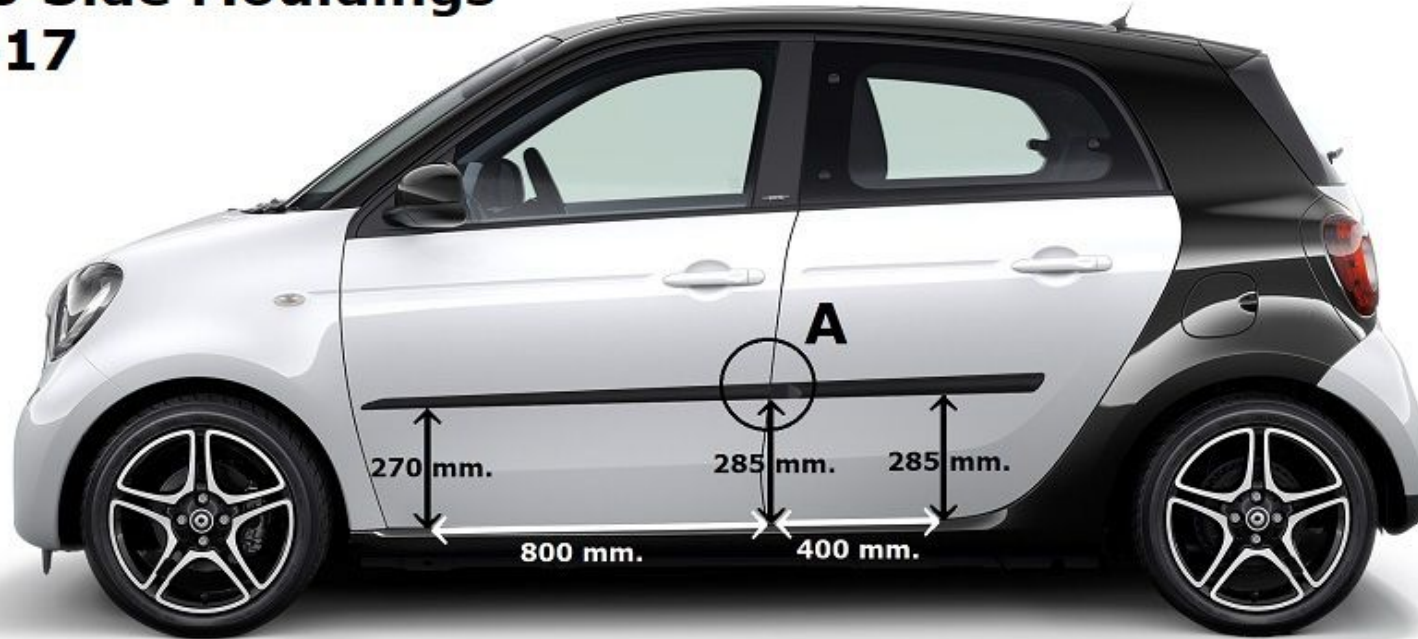