

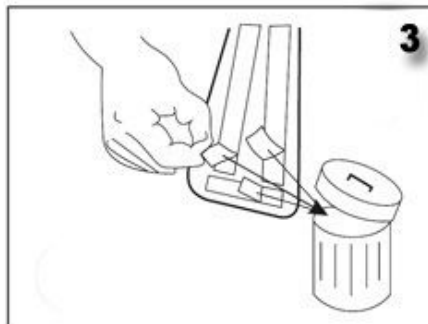
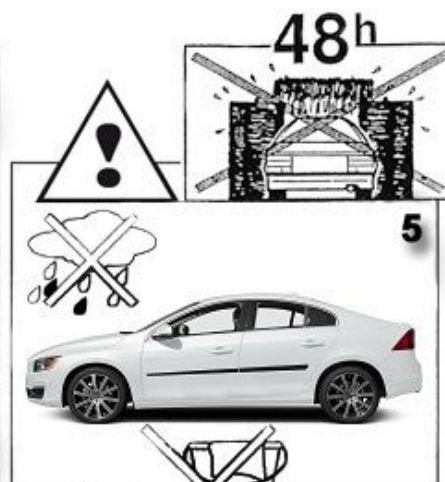


Volvo S-60 2011 → PU Side Mouldings F-20

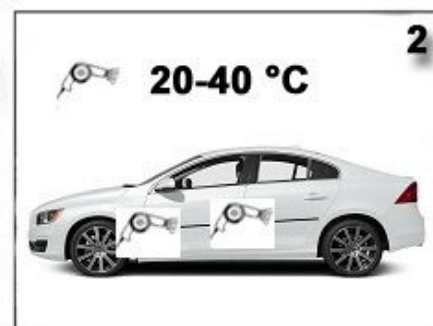

ledere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrucken jeden cm !!

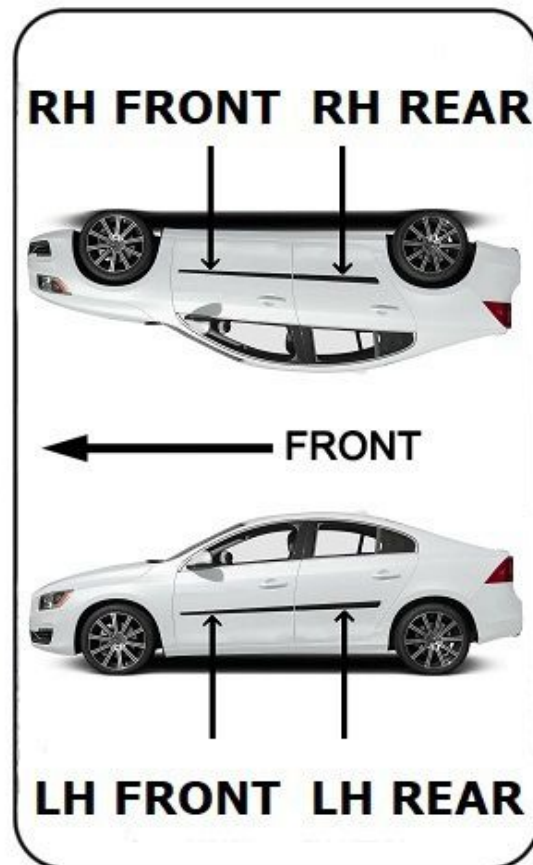