

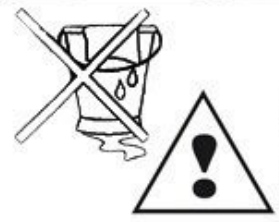
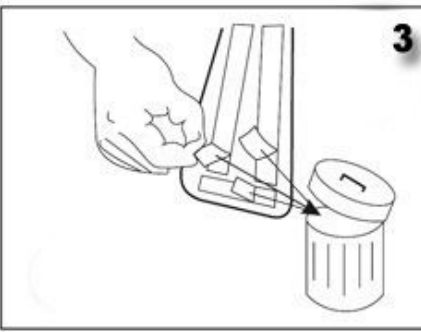


Mitsubishi ASX 2010 → PU Side Mouldings F-21

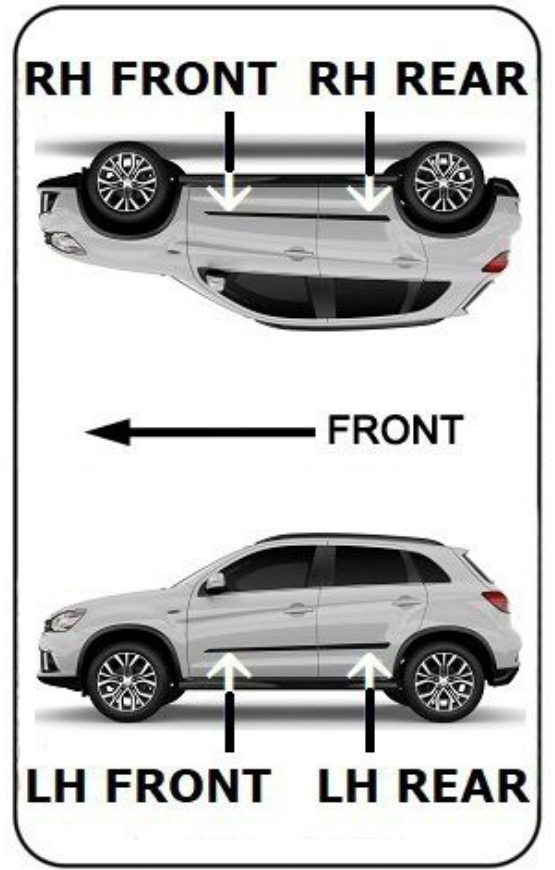

ledere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrücken jeden cm !!

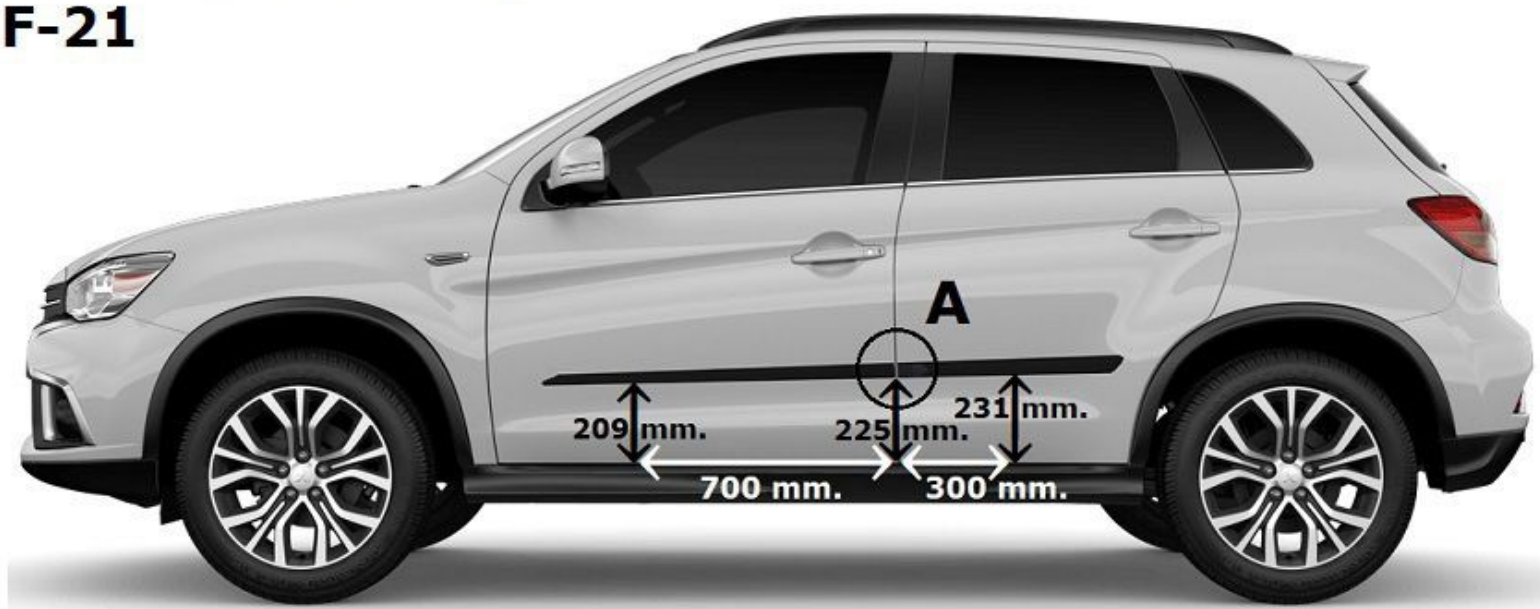