

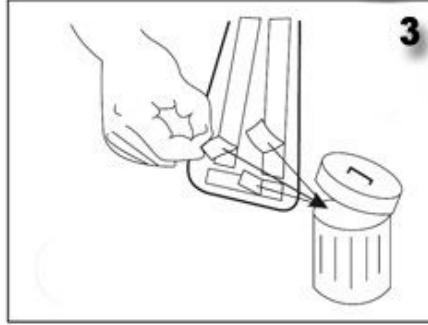
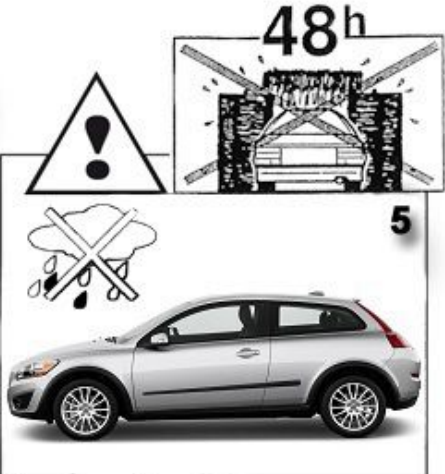


Volvo C30 2011 → PU Side Mouldings F-25

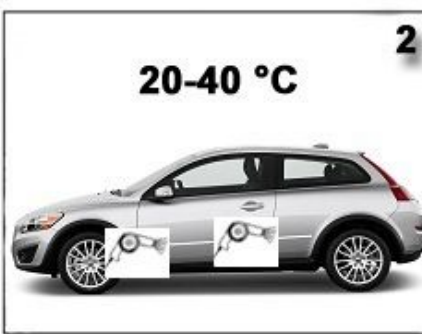

ledere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrucken jeden cm !!

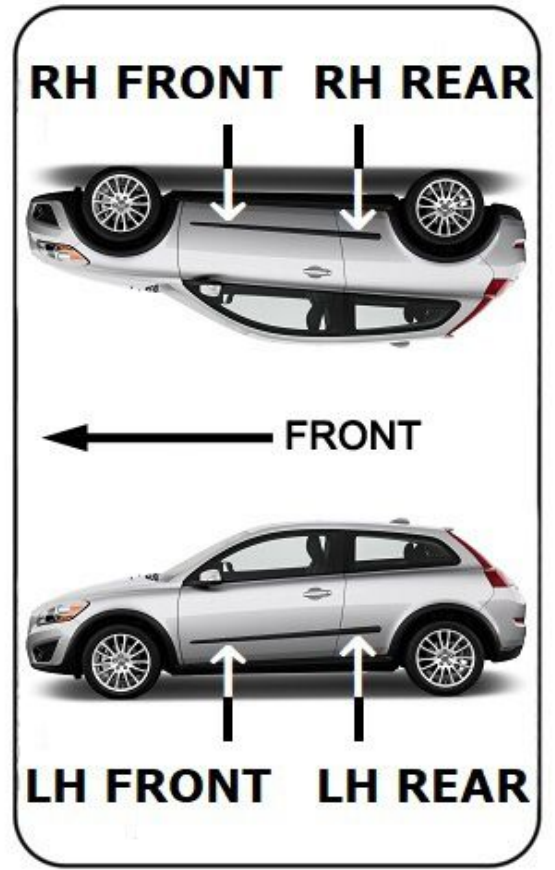