
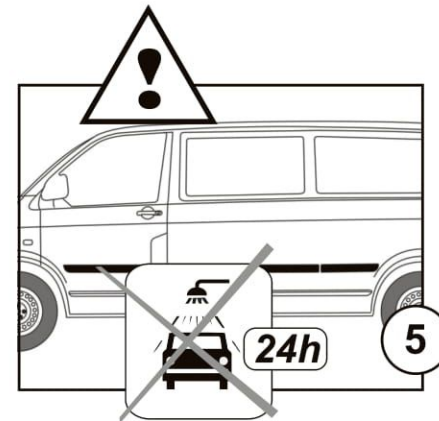
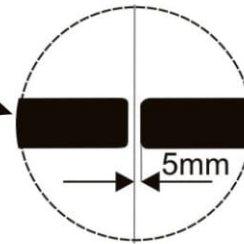
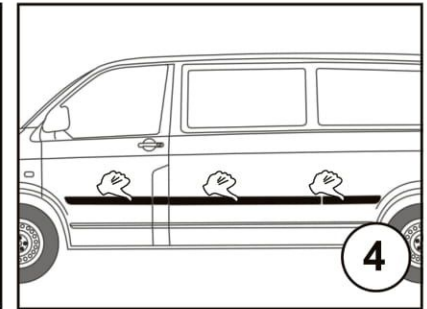
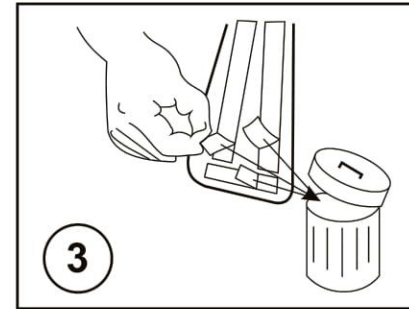
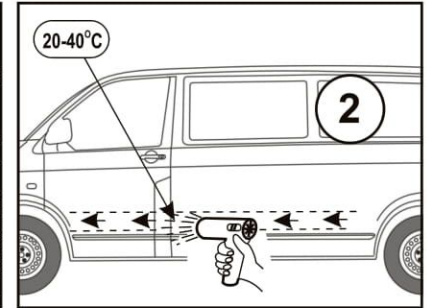
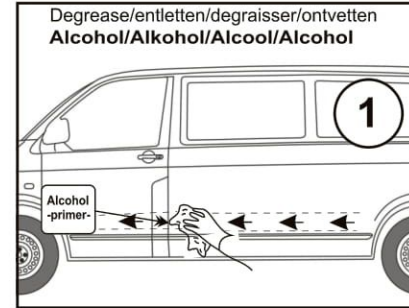
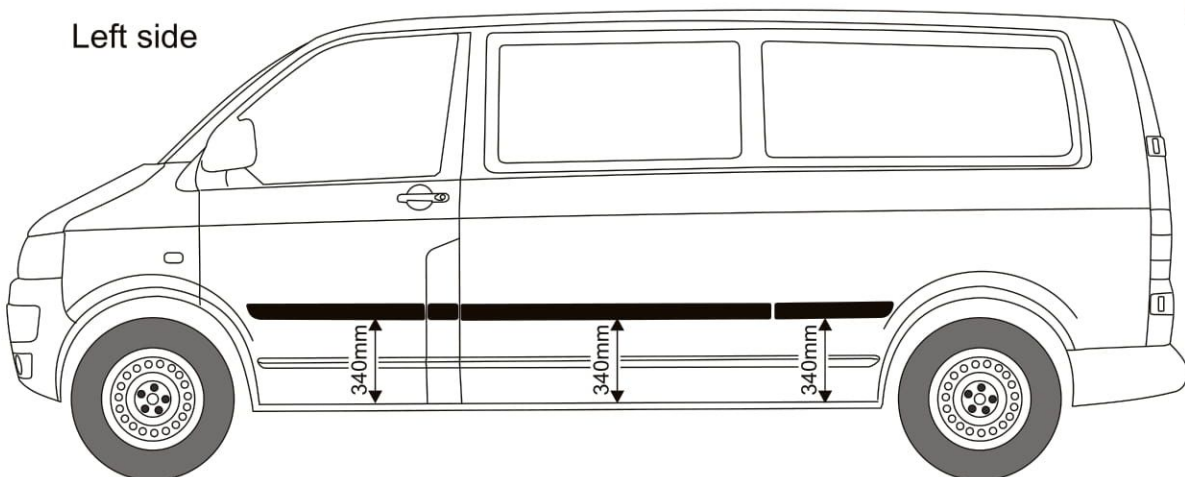


Volkswagen T5 (long)

PU side mouldings

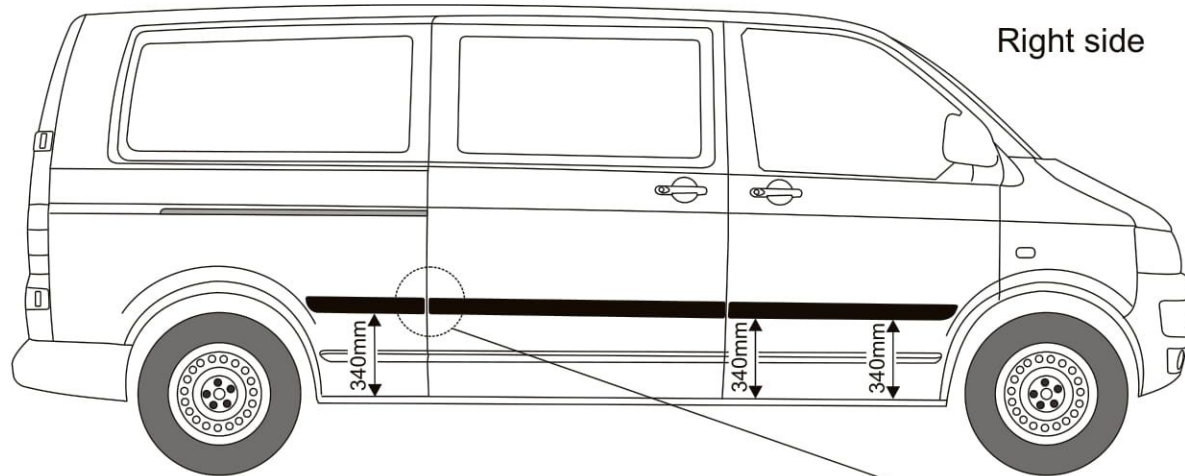

Iedere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrücken jeden cm !!