
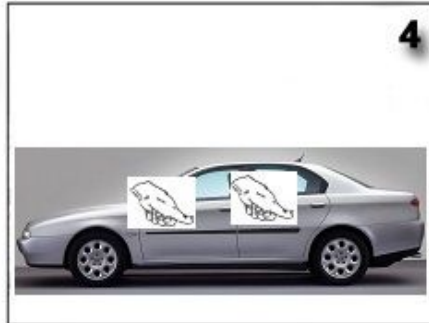
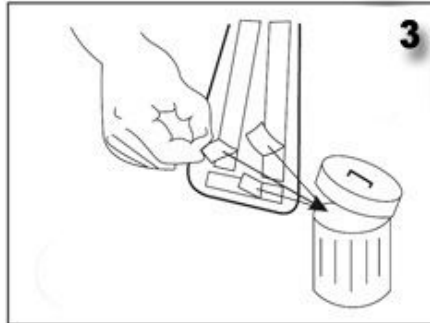
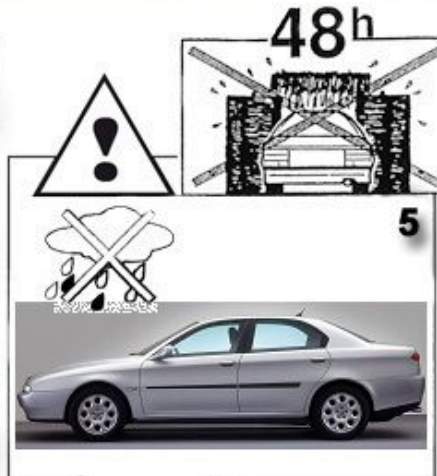
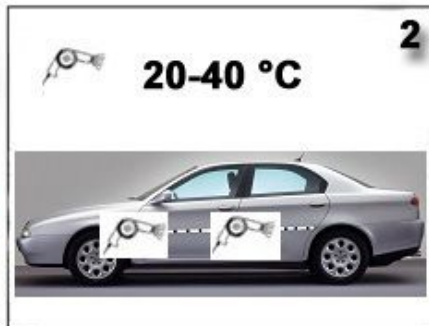


# Alfa Romeo 166 1998-2007

## PU Side Mouldings

### F-5

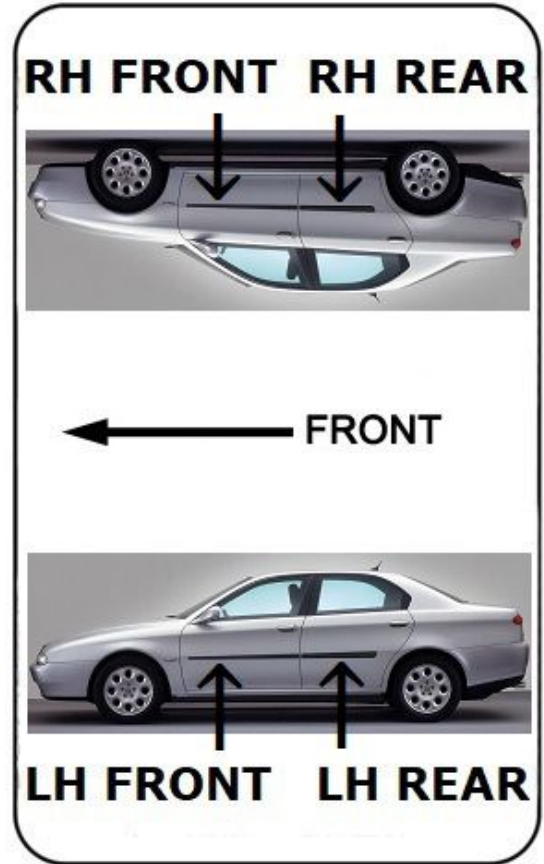

ledere cm goed aandrukken !!  
Press very carefully every cm !!  
Sehr fest andrücken jeden cm !!

